

Anweisungen für Handhabung und Gebrauch

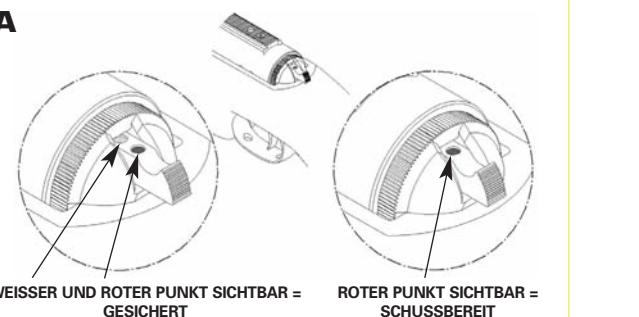
Wir beglückwünschen Sie zu Ihrem neuen DIANA-Luftgewehr. Dieses Kipplaufmodell aus der neuen Generation soll Ihnen viele Jahre Spaß und gute Ergebnisse bei Ihrer Freizeitgestaltung bringen.

Achten Sie bitte darauf, dass Sie mit diesem Luftgewehr nie fahrlässig umgehen und halten Sie sich an die gesetzlichen Bestimmungen.

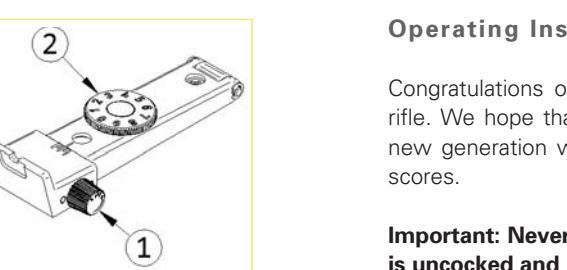
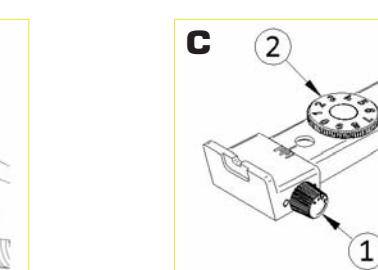
Spannen und Laden

Zum Spannen wird das Luftgewehr mit der einen Hand am Schaft gefasst und durch einen leichten Schlag mit der anderen Hand auf den Lauf in Höhe der Mündung geöffnet. Der Lauf wird dann soweit nach unten gekippt, bis der Abzug hörbar einrastet. Die Waffe sichert automatisch. Die Luftgewehrkugel wird am hinteren Ende des Laufes eingeführt. Es ist natürlich darauf zu achten, dass das Kaliber der Munition dem des Gewehres entspricht. Nach gleichmäßiger Zurückbringen des Laufes in seine Ausgangsstellung ist das Gewehr schussbereit. Vor der Schussabgabe ist der am hinteren Ende des Zylinders befindliche Sicherungsschieber zu entsichern, in dem er in Richtung Laufmündung geschoben wird (**Bild A**).

Während des Spannvorganges darf der Sicherungsschieber nicht blockiert werden!

**Abzug**

Die Modelle sind serienmäßig mit dem Druckpunktabzug ausgerüstet (**Bild B**).

**Vorweglänge:**

Werkseitig ist der kürzeste Vorweg einjustiert. Durch Linksdrehung der Schraube 1 kann der Vorweg stufenlos verlängert werden.

Druckpunkt:
Bei eventuellem Verstellen des Vorweges **muss** jedoch der Druckpunkt nachgestellt werden. Ist bei der Überwindung des Druckpunktes ein Nachziehen spürbar, ist dieses durch Linksdrehen der Druckpunktschraube 2 zu beseitigen. Löst sich der Schuss ohne spürbaren Druckpunkt, so muss die Druckpunktschraube 2 nach rechts gedreht werden.
➤ Rechtsdrehen der Schraube 2 = härterer Druckpunkt
➤ Linksdrehen der Schraube 2 = weicherer Druckpunkt

Abzugsgewicht:
Durch Verstellen der Stellschraube 3 ist es möglich das Abzugsgewicht zu regulieren.

➤ Rechtsdrehen der Schraube 3 = höheres Abzugsgewicht
➤ Linksdrehen der Schraube 3 = geringeres Abzugsgewicht
Das Abzugsgewicht liegt zwischen min. 400 Gramm bis max. 500 Gramm.

Visierung

Standard-Visier oder TRUGLO-Fiberoptik (**Bild C**).

DIANA-Luftgewehre können mit einem Standard-Visier oder TRUGLO-Fiberoptik ausgerüstet sein. Beide Mikrometervisiere sind nach Höhe und Seite justierbar. Die Stellschrauben rasten klickartig ein.

Für die Einstellung gilt die Regel:
➤ bei Links- oder Hochschuss = Schraube 1 bzw. 2 nach rechts drehen
➤ bei Rechts- oder Tiefschuss = Schraube 1 bzw. 2 nach links drehen

Operating Instructions

Congratulations on the purchase of your new DIANA air rifle. We hope that this air rifle with cocking barrel of the new generation will bring you lots of fun and always top scores.

Important: Never let your gun point at people even if it is uncocked and unloaded. Always shoot safely.

Cocking

- > With one hand grasp stock firmly behind trigger guard.
- > Holding rifle securely tap barrel near front sight, thus breaking locked position.
- > Grasp barrel behind front sight and push down until you hear an audible click of the trigger mechanism being engaged.
- > Turn clockwise = pull-off will be harder
- > Turn counterclockwise = pull-off will be softer

Trigger weight:

- The trigger weight can be adjusted by turning the screw (3).
- > Turn clockwise = weight will be increased
 - > Turn counterclockwise = weight will be reduced

It is detrimental to fire the weapon without a pellet in the barrel, as the free impact strains the mechanism. Do not leave the rifle in cocked position for long periods whether loaded or not – as this weakens the mainspring.

Trigger weight ranges from 400 g (at a minimum) to 500 g (at a maximum).

Don't block safety slide during cocking action!**Sight adjustment**

The DIANA air rifles could be equipped with standard sight or TRUGLO fiber optic sights (**Image C**).

Both sights are adjustable vertically and horizontally.

- > If the rifle shoots to the left = turn screw 1 clockwise
- > If the rifle shoots to the right = turn screw 1 counterclockwise

The settings for the elevation are marked by the numbers 0–9 on the elevation adjustment screw.

- > If the rifle shoots high = turn screw 2 clockwise
- > If the rifle shoots low = turn screw 2 counterclockwise

Note: The numbers are just a memory aid and do not indicate the distances.

Trigger device

Your air rifle is equipped with a two-stage trigger as standard (**Image B**).

First stage travel:

The first stage travel is reduced to a minimum by factory. By turning the screw (1) counterclockwise the first stage travel will be extended.

Pull-off:

When the first stage travel will be adjusted the pull-off must not be used. Insert rod from breech end, do not remove barrel seal. The blueing prevents the outer parts from easy rusting. Maintain protection by occasionally wiping these parts with slightly oiled cloth.

➤ The safety engages automatically. This is indicated by a white and red marking on the safety slide.

➤ Insert pellet into breech end of open barrel. Make sure calibre of pellet matches calibre of rifle.

➤ Return barrel to original locked position. The rifle is now ready to fire.

➤ Before firing push safety slide situated at the end of the compression tube forwards (**Image A**).

Care and Cleaning

At intervals the barrel should be cleaned by means of a felt wad or cleaning rod with wool mop. Wire brushes should not be used. Insert rod from breech end, do not remove barrel seal. The blueing prevents the outer parts from easy rusting. Maintain protection by occasionally wiping these parts with slightly oiled cloth.

Trigger weight:

The trigger weight can be adjusted by turning the screw (3).

➤ Turn clockwise = weight will be increased

➤ Turn counterclockwise = weight will be reduced

These air rifles can be used with all types of standard airgun pellets – flat nose, rounded, pointed etc. Do not use steel bolts, steel darts, BB's or similar.

Sight adjustment

The DIANA air rifles could be equipped with standard sight or TRUGLO fiber optic sights (**Image C**).

Both sights are adjustable vertically and horizontally.

- > If the rifle shoots to the left = turn screw 1 clockwise
- > If the rifle shoots to the right = turn screw 1 counterclockwise

The settings for the elevation are marked by the numbers 0–9 on the elevation adjustment screw.

- > If the rifle shoots high = turn screw 2 clockwise
- > If the rifle shoots low = turn screw 2 counterclockwise

Note: The numbers are just a memory aid and do not indicate the distances.

Trigger device

Your air rifle is equipped with a two-stage trigger as standard (**Image B**).

First stage travel:

The first stage travel is reduced to a minimum by factory. By turning the screw (1) counterclockwise the first stage travel will be extended.

Pull-off:

When the first stage travel will be adjusted the pull-off must not be used. Insert rod from breech end, do not remove barrel seal. The blueing prevents the outer parts from easy rusting. Maintain protection by occasionally wiping these parts with slightly oiled cloth.

➤ The safety engages automatically. This is indicated by a white and red marking on the safety slide.

➤ Insert pellet into breech end of open barrel. Make sure calibre of pellet matches calibre of rifle.

➤ Return barrel to original locked position. The rifle is now ready to fire.

➤ Before firing push safety slide situated at the end of the compression tube forwards (**Image A**).

Care and Cleaning

At intervals the barrel should be cleaned by means of a felt wad or cleaning rod with wool mop. Wire brushes should not be used. Insert rod from breech end, do not remove barrel seal. The blueing prevents the outer parts from easy rusting. Maintain protection by occasionally wiping these parts with slightly oiled cloth.

Trigger weight:

The trigger weight can be adjusted by turning the screw (3).

➤ Turn clockwise = weight will be increased

➤ Turn counterclockwise = weight will be reduced

These air rifles can be used with all types of standard airgun pellets – flat nose, rounded, pointed etc. Do not use steel bolts, steel darts, BB's or similar.

Sight adjustment

The DIANA air rifles could be equipped with standard sight or TRUGLO fiber optic sights (**Image C**).

Both sights are adjustable vertically and horizontally.

- > If the rifle shoots to the left = turn screw 1 clockwise
- > If the rifle shoots to the right = turn screw 1 counterclockwise

The settings for the elevation are marked by the numbers 0–9 on the elevation adjustment screw.

- > If the rifle shoots high = turn screw 2 clockwise
- > If the rifle shoots low = turn screw 2 counterclockwise

Note: The numbers are just a memory aid and do not indicate the distances.

Trigger device

Your air rifle is equipped with a two-stage trigger as standard (**Image B**).

First stage travel:

The first stage travel is reduced to a minimum by factory. By turning the screw (1) counterclockwise the first stage travel will be extended.

Pull-off:

When the first stage travel will be adjusted the pull-off must not be used. Insert rod from breech end, do not remove barrel seal. The blueing prevents the outer parts from easy rusting. Maintain protection by occasionally wiping these parts with slightly oiled cloth.

➤ The safety engages automatically. This is indicated by a white and red marking on the safety slide.

➤ Insert pellet into breech end of open barrel. Make sure calibre of pellet matches calibre of rifle.

➤ Return barrel to original locked position. The rifle is now ready to fire.

➤ Before firing push safety slide situated at the end of the compression tube forwards (**Image A**).

Care and Cleaning

At intervals the barrel should be cleaned by means of a felt wad or cleaning rod with wool mop. Wire brushes should not be used. Insert rod from breech end, do not remove barrel seal. The blueing prevents the outer parts from easy rusting. Maintain protection by occasionally wiping these parts with slightly oiled cloth.

Trigger weight:

The trigger weight can be adjusted by turning the screw (3).

➤ Turn clockwise = weight will be increased

➤ Turn counterclockwise = weight will be reduced

These air rifles can be used with all types of standard airgun pellets – flat nose, rounded, pointed etc. Do not use steel bolts, steel darts, BB's or similar.

Sight adjustment

The DIANA air rifles could be equipped with standard sight or TRUGLO fiber optic sights (**Image C**).

Both sights are adjustable vertically and horizontally.

- > If the rifle shoots to the left = turn screw 1 clockwise
- > If the rifle shoots to the right = turn screw 1 counterclockwise

The settings for the elevation are marked by the numbers 0–9 on the elevation adjustment screw.

- > If the rifle shoots high = turn screw 2 clockwise
- > If the rifle shoots low = turn screw 2 counterclockwise

Note: The numbers are just a memory aid and do not indicate the distances.

Trigger device

Your air rifle is equipped with a two-stage trigger as standard (**Image B**).

First stage travel:

The first stage travel is reduced to a minimum by factory. By turning the screw (1) counterclockwise the first stage travel will be extended.

Pull-off:

When the first stage travel will be adjusted the pull-off must not be used. Insert rod from breech end, do not remove barrel seal. The blueing prevents the outer parts from easy rusting. Maintain protection by occasionally wiping these parts with slightly oiled cloth.

➤ The safety engages automatically. This is indicated by a white and red marking on the safety slide.

➤ Insert pellet into breech end of open barrel. Make sure calibre of pellet matches calibre of rifle.

➤ Return barrel to original locked position. The rifle is now ready to fire.

➤ Before firing push safety slide situated at the end of the compression tube forwards (**Image A**).

Care and Cleaning

At intervals the barrel should be cleaned by means of a felt wad or cleaning rod with wool mop. Wire brushes should not be used. Insert rod from breech end, do not remove barrel seal. The blueing prevents the outer parts from easy rusting. Maintain protection by occasionally wiping these parts with slightly oiled cloth.

Trigger weight:

The trigger weight can be adjusted by turning the screw (3).